

THESE FOUR VOLUME CONTROLS ARE THE ONLY ONES NEEDED FOR A TYPICAL GAME EVENT

ALWAYS USE THE SEQUENCER SWITCH TO TURN THE SYSTEM ON OR OFF!

INPUTS FOR USE WITH IPOD OR LAPTOP

NEVER USE THE RED LIT SWITCH TO TURN THE SYSTEM ON OR OFF!

THE MASTER VOLUME CONTROLS HAVE NO FUNCTION AND SHOULD NOT EVER BE TOUCHED.

DO NOT ATTEMPT TO CHANGE OR MODIFY THE SETTINGS ON THESE AMPLIFIERS. THE CONTROL KNOBS ARE LOCKED AND CANNOT BE CHANGED FROM THE FACE OF THE EQUIPMENT.

